

CODIGO	TIPO	WATTS	MARCA
33-01-003	Simple - Rotativo	700	Leviton 836-700 - Blister
33-01-007	Simple - Rotativo	600	Leviton 6602
33-01-011	3 Vías	600	Leviton 6683
33-02-001	A presión	600	Eagle 6000
33-02-005	Simple - Rotativo	600	Eagle 6001
33-02-011	A presión - 3 Vías	600	Eagle 6003
33-03-001	Simple - Rotativo	1000	Eagle 1000 - Leviton 61000
33-04-002	Simple - Rotativo	1500	Leviton 61500
33-05-004	Simple - Rotativo	2000	Eagle 2000 - Leviton 62000
33-06-000	Magic Taco	500	"Magic" bticino 5361
33-06-002	Matix	300	"Matix" AM4406
33-06-003	Matix	500	"Matix" AM5704
33-06-005	Simple - Rotativo	300	"Modus" E4355
33-06-006	Simple - Rotativo	500	"Tridenti" - Tipo taco
33-09-001	Simple - Sensitron	600	"Decora" Leviton 6608
33-09-002	De Toque	600	"Decora" Leviton 6606
33-09-004	Programado - 4 Niveles	600	"Decora" Leviton 6161
33-09-005	3 Vías - Deslizante	500	"Decora" Leviton 6623-P
33-09-007	Bajo Voltaje	600	"Decora" Leviton 6611-P
33-09-008	Bajo Voltaje - 3 Vías	600	"Decora" Leviton 6613-P
33-09-009	Bajo Voltaje	1000	"Decora" Leviton 71111
33-09-011	Simple - Deslizante	600	"Decora" Leviton 6621
33-09-013	Deslizante - Con piloto	600	"Decora" Leviton 6631
33-09-025	Simple - Deslizante	600	Eagle 6421W
33-09-027	Simple - Deslizante - Con preset.	600	Eagle 6420W
33-09-029	3 Vías - Deslizante	600	Eagle 6423W
33-09-030	Deslizante - Con piloto	600	Eagle 6430W
33-10-001	Simple - De toque	600	Eagle 6460W (blanco) - Eagle 6470BK (Negro)
33-10-005	Simple - De toque	1000	Eagle 6471W (Disponible en blanco, beige y negro)



33-01-003



 
33-01-007



33-02-001



33-02/04/05

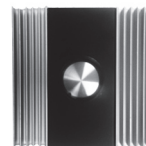

33-05-004



 
33-06-000




33-06-006



33-09-001

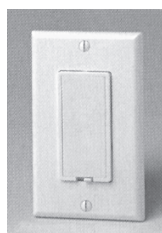

33-09-002

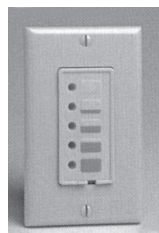 

33-09-004



33-09-005
33-09-011



33-09-007
33-09-008
33-09-009



33-09-025



33-09-027
33-09-029



33-09-030



33-10-005